


## FOUR MODES OF OPERATION

- Press [A/B] will switch display from one circuit to the other.
- Press [Shift] and the next key pressed is in use. Indicated by LED light above.
- Use [▲▼] keys to change the numeric values.
- Press [Enter] to select or save.
- Press [Back] to exit menu and return to scan mode.

## ACKNOWLEDGE AN ALARM

1. Press [Shift] + [A/B]. The LED above the word Alarm is illuminated.
2. The display will scroll through what type of alarm is indicating.
3. Press [Enter] to reset the Alarm, use [▲▼] keys to navigate.
4. Press [Enter] again to save.

## NAVIGATING CONFIGURE MODE MAIN MENU

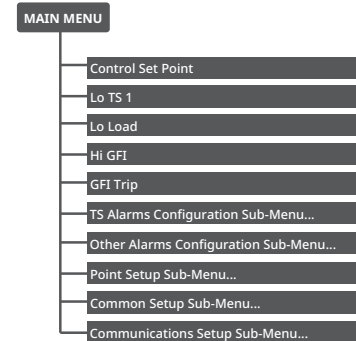

## CHANGE A SET POINT

1. Press [Shift] + [Enter]. The LED above the word Config is illuminated.
2. Press [Enter] again and the set point numeric value will blink.
3. Use [▲▼] keys to change the numeric value.
4. Press [Enter] to save.

## ACCESS MAINTENANCE DATA

1. Press [Shift] + [Back]. The LED above the word Monitor is illuminated.
2. Use [▲▼] keys to scroll through the menu.
3. Scroll down to "Maintenance Data..." Press [Enter].
4. Additional sub-menu will open up to view more data.

\*Please reference the manual for the complete list of configuration sub-menus.  
 \*\*Menu items with trailing "..." indicate the entry point to a sub-menu.

### North America

Tel +1 800 545 6258  
 info@chemelex.com

### Latin America

Tel +1 713 868 4800  
 info@chemelex.com


### Europe, Middle East, Africa, India

Tel +32 16 213 511  
 Fax +32 16 213 604  
 info@chemelex.com

### Asia Pacific

Tel +86 21 2412 1688  
 infoAPAC@chemelex.com

## Quick Start Guide

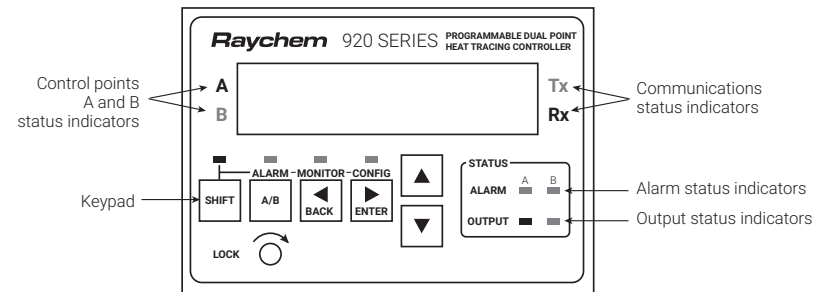

## FOUR MODES OF OPERATION

### SCAN

Default mode displayed during normal operation. The console sequentially displays load current, temperature, and setpoint readings for circuits A and B.

 
### ALARM

Examine or reset any alarms that may exist. The LED above the **ALARM** key is illuminated while in this mode.



### MONITOR

Examine any of the controller readings such as temperature, load current, etc. The LED above the **MONITOR** key is illuminated while in this mode.

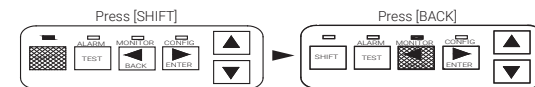

### CONFIGURE

Access the console menus to examine or alter the settings. The LED above the **CONFIG** key is illuminated while in this mode.



Reference the manual for complete installation instructions.