


Raychem

NGC-40-BRIDGE

Control and Monitoring Modules for use with the Raychem NGC-40 System
Installation Instructions

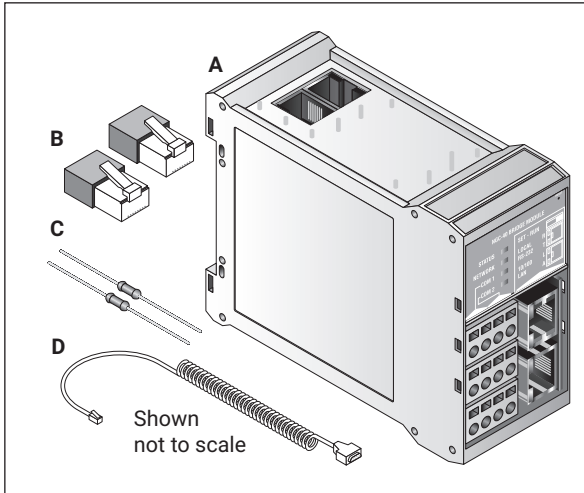

APPROVALS

Hazardous Locations



Class I, Div. 2, Groups A,B,C,D T4
Class I, Zone 2, AEx ec IIC T4 Gc IP20
Ex ec IIC T4 Gc X
-40°C ≤ Ta ≤ +65°C

Conforms to:

UL STD 121201, 60079-0, 60079-7, 61010-1,
61010-2-201

Certified to:

CSA STD C22.2# 213, 60079-0, 60079-7,
61010-1, 61010-2-201



(Russia, Kazakhstan, Belarus)
For other countries contact your local
Chemelex representative.

IEC Ex Markings:

IECEx ETL 17.0062X
Ex ec IIC T4 Gc

ATEX Markings:

ITS17ATEX402833X
II 3 G Ex ec IIC T4 Gc

DESCRIPTION

The Raychem NGC-40-BRIDGE module provides the interface between a panel's internal CAN-based network and upstream devices. Multiple communications ports are supported, allowing serial and Ethernet connections to be used with external devices.

TOOLS REQUIRED

- Small flat-blade screwdriver

ADDITIONAL MATERIALS

- Power supply 24 Vdc @150 mA per NGC-40-BRIDGE
- Custom built CAN cables with RJ-45 connections

KIT CONTENTS

Item	Qty	Description
A	1	NGC-40-BRIDGE module
B	2	CAN bus termination block PTM# 10392-043
C	2	RS-485 termination resistors 120 Ω – 1% - 1/4 watt
D	1	NGC-40-BRIDGE serial cable TTC# 10332-005

Special conditions of use:

- The overall equipment is evaluated to type of protection "ec"
- For full connection details see these installation instructions
- The equipment shall only be used in an area of not more than pollution degree 2, as defined in IEC/EN 60664-1
- The equipment shall be installed in an enclosure that provides a minimum ingress protection of IP54 in accordance with IEC/EN 60079-0
- Transient protection shall be provided that is set at a level not exceeding 140% of the peak rated voltage value at the supply terminals to the equipment

WARNING:

This component is an electrical device that must be installed correctly to ensure proper operation and to prevent shock or fire. For technical support, call Chemelex at (800) 545-6258.

GENERAL

Supply voltage	24 Vdc $\pm$ 10%
Internal power consumption	<3.6 W per NGC-40-BRIDGE
Ambient operating temperature	–40°C to 65°C (–40°F to 149°F)
Ambient storage temperature	–55°C to 75°C (–67°F to 167°F)
Environment	PD2, CAT III
Max. altitude	2,000 m (6,562 ft)
Humidity	5 – 90% noncondensing
Mounting	Din Rail – 35 mm

ELECTROMAGNETIC COMPATIBILITY

Emissions	EN 61000-6-3 Emission standard for residential, commercial and light industrial environments
Immunity	EN 61000-6-2 Immunity standard for industrial environments

COMMUNICATIONS COM1, COM2

Type	2-wire RS-485
Cable	One shielded twisted pair
Length	1,200 m (4,000 ft) maximum
Quantity	Up to 255 devices per port
Data rate	9600, 19.2 K, 38.4 K, 57.6 K, 115.2 K baud
Data bits	7 or 8
Parity	None, even, odd
Stop bits	0, 1, 2
Tx delay	0 – 5 sec.
Protocol	Modbus RTU or ASCII
Connection terminals	Wago cage clamp terminals

COMMUNICATIONS COM3

Type	RS-232
Cable	Custom TTC# 10332-005
Length	15 m (50 ft) maximum
Data rate	9600, 19.2 K, 38.4 K, 57.6 K, 115.2 K baud
Data bits	7 or 8
Parity	None, even, odd
Stop bits	0, 1, 2
Tx delay	0 – 5 sec.
Protocol	Modbus RTU or ASCII
Connection terminals	RJ-11

CAN NETWORKING PORT

Type	2-wire isolated CAN-based peer-peer network. Isolated to 300 V.
Connection	Two 8-pin RJ-45 connectors (both may be used for Input or Output connections)
Protocol	Proprietary NGC-40
Topology	Daisy chain
Length	10 m (33 ft) maximum
Quantity	Up to 80 CAN nodes per network segment
Address	Unique, factory assigned

ETHERNET

Type	10/100 BaseT Ethernet network
Length	100 m (328 ft)
Data rates	10 or 100 MB/s
Protocol	Modbus/TCP
Connection terminals	Shielded 8-pin RJ-45 connector on front of module

PROGRAMMING AND SETTING

LED indicators	
Alarm conditions	RESET, Configuration lost, CAN communications fail
Configuration switch	SET/RUN slide switch on front of module


CONNECTION TERMINALS

Wiring terminals	Cage clamp, 0.5 to 2.5 mm ² (24 to 12 AWG)
CAN networking and module power	Two RJ-45s, one each IN and OUT. Provides CAN bus signals and +24 Vdc power.

HOUSING

Size	45.1 mm (1.78 in) wide x 87 mm (3.43 in) high x 106.4 mm (4.2 in) deep
------	--

System Components

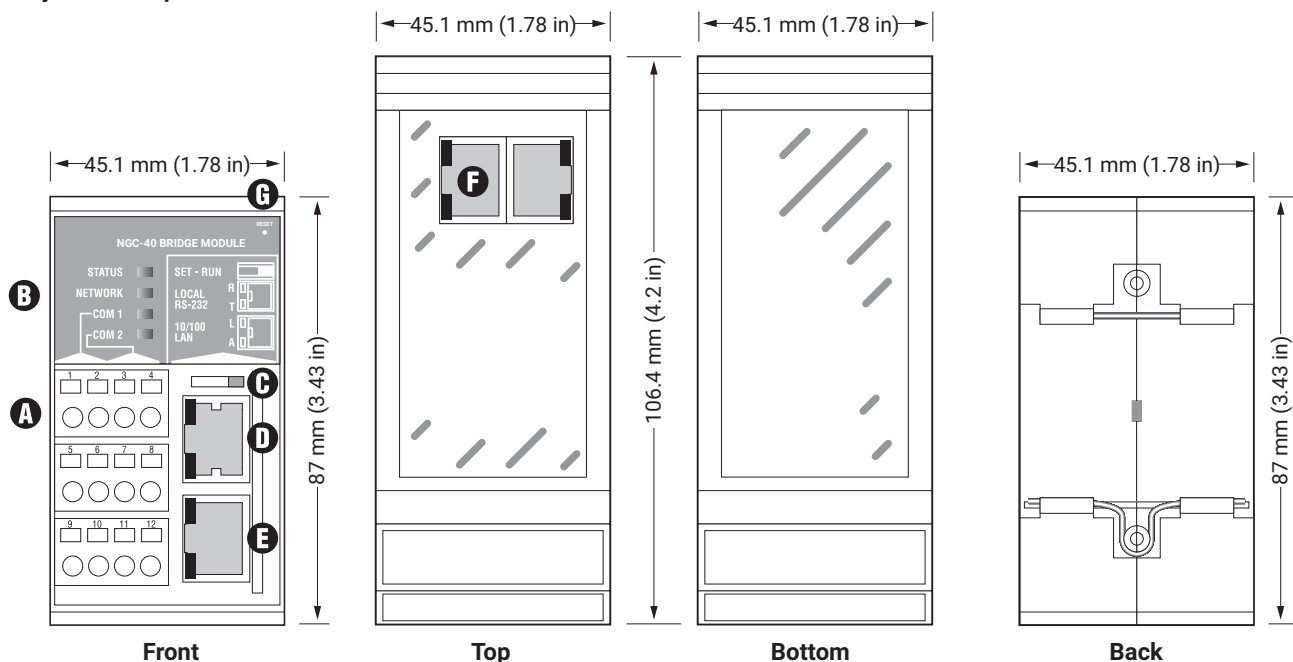

A. Wiring Terminals

Terminals	Function
1	COM 1 (485) + in
2	COM 1 (485) + out
3	COM 2 (485) + in
4	COM 2 (485) + out
5	COM 1 (485) – in
6	COM 1 (485) – out
7	COM 2 (485) – in
8	COM 2 (485) – out
9 – 12	Not used

B. Status LEDs

Status: Indicates status of the module

Off	No power
Green	OK/Normal
Yellow	(flashing) Configuration mode
Red	(flashing) Internal fault

NETWORK: Indicates CAN network activity

Off	No link detected
Green	Link OK, receive data packets
Yellow	Transmit data packets
Red	(flashing) Network error

COM: Indicates COM1 & 2 (RS-485) activity

Off	No activity
Green	(flashing) Receipt of data packet
Yellow	(flashing) Transmit of data packet

C. Communication Slide Switch

D. RS-232 Port

Status: Indicates status of RS-232 port

Top LED	
Off	No activity
Green	(flashing) Receipt of data packet
Bottom LED	
Off	No activity
Yellow	(flashing) Transmit of data packet

E. Ethernet Port

Status: Indicates status of the LAN

Top LED	
Off	No LAN detected
Green	ON, LAN detected
Bottom LED	
Off	No LAN activity
Yellow	(flashing) LAN activity (data packet)

F. CAN Bus/Module Power




G. Reset Button

Mounting the NGC-40-BRIDGE

Each NGC-40-BRIDGE mounts on a DIN 35 rail.

MOUNTING: Insert the rear bottom of the module into the DIN rail, then push up and inwards to engage the clip.

REMOVAL: Push the module upwards to disengage the clip, then rotate the module toward you.

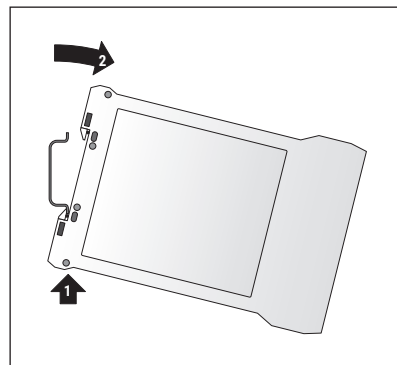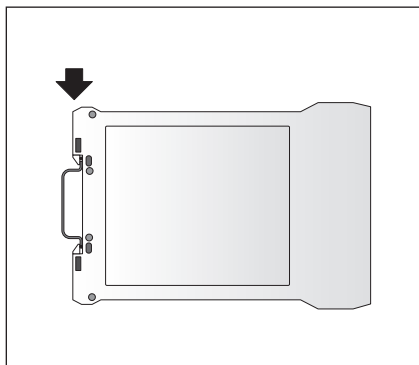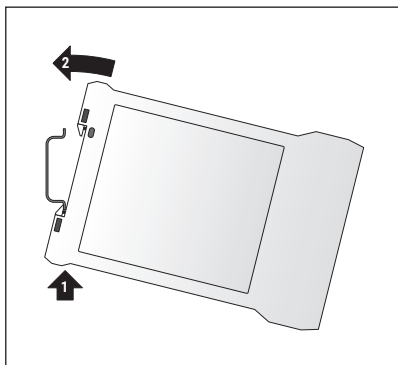



RS-485 Connection Diagrams – North American Installation Technique

COM 1&2 Connections (In)

Wiring for Com 1 & Com 2 must be terminated on a panel mounted terminal block. No ground wires should be terminated on terminals 9 & 11. Terminate Com shields at the panel mounted field terminal block chassis ground.

COM 1&2 Connections (Out) and RS-485 Termination Resistor


Wiring for Com 1 & Com 2 must be terminated on a panel mounted terminal block. No ground wires should be terminated on terminals 10 & 12. Terminate Com shields and 120 Ω termination resistors (included) at the panel mounted field terminal block as shown.

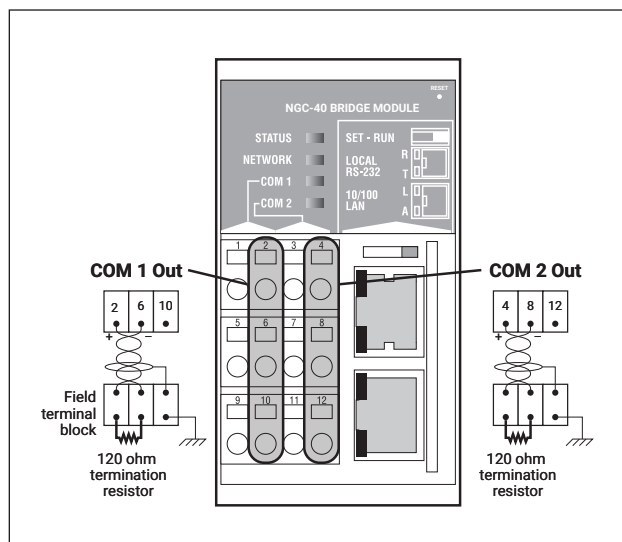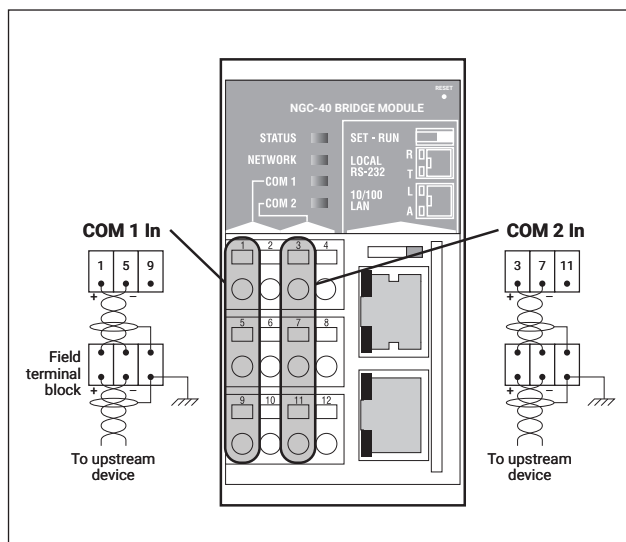

RS-485 Connection Diagrams – European Installation Technique


COM 1&2 Connections (In)

Wiring for Com 1 & Com 2 must be terminated on a panel mounted terminal block. No ground wires should be terminated on terminals 9 & 11. Terminate Com shields at the panel mounted field terminal block chassis ground. The Com cable shield from the field terminal block to the Bridge should be terminated at the earth ground bar.

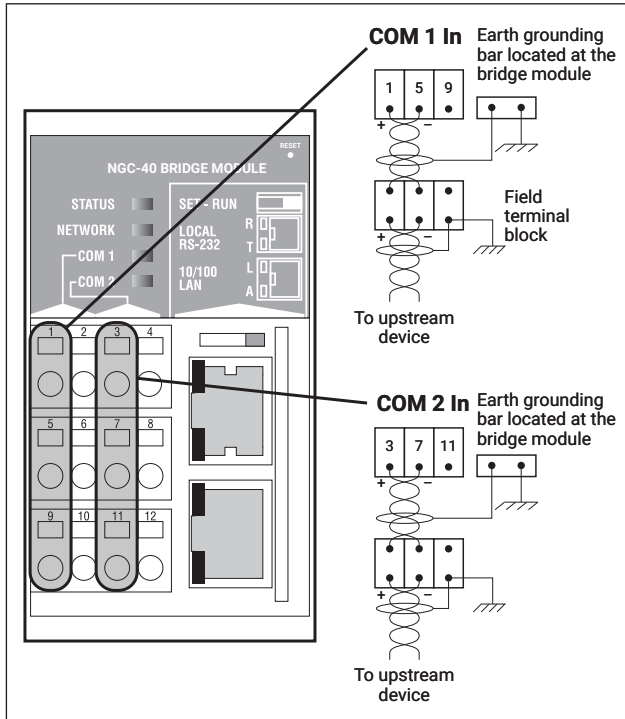


COM 1&2 Connections (Out) and RS-485 Termination Resistor

Wiring for Com 1 & Com 2 must be terminated on a panel mounted terminal block. No ground wires should be terminated on terminals 10 & 12. Terminate Com shields and 120 Ω termination resistors (included) at the panel mounted field terminal block as shown. The Com cable shield from the field terminal block to the Bridge should be terminated at the earth ground bar.

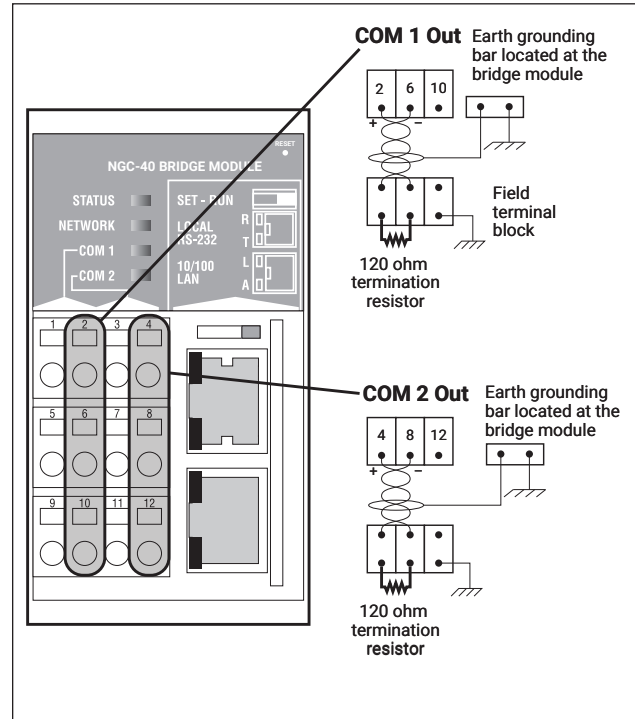

Local RS-232 (COM 3) & Ethernet

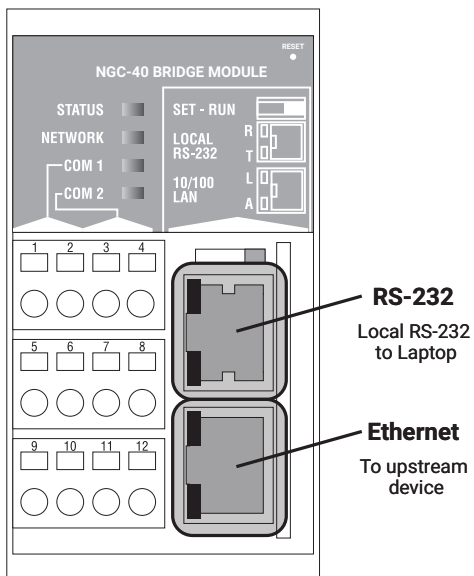

Switch Setting RS-232

User Interface – Configuration Switch


A slide switch is provided on the front of the module to allow the user to set the bridge into a known state for configuration of the communication ports, as shown in the following table:

Bridge Module Settings	Switch Position	
	SET Configuration mode	RUN Normal operating mode
Modbus address	1	
Local RS-232		
Protocol	RTU	Settings based on the user configuration parameters
Data rate	9600 baud	
Data bits	8	
Stop bits	2	
Parity	No parity	


RMM2 Connection – Optional

When using the field mounted RMM2 for RTD input, it must be connected to the COM 2 In as shown below.


Panel

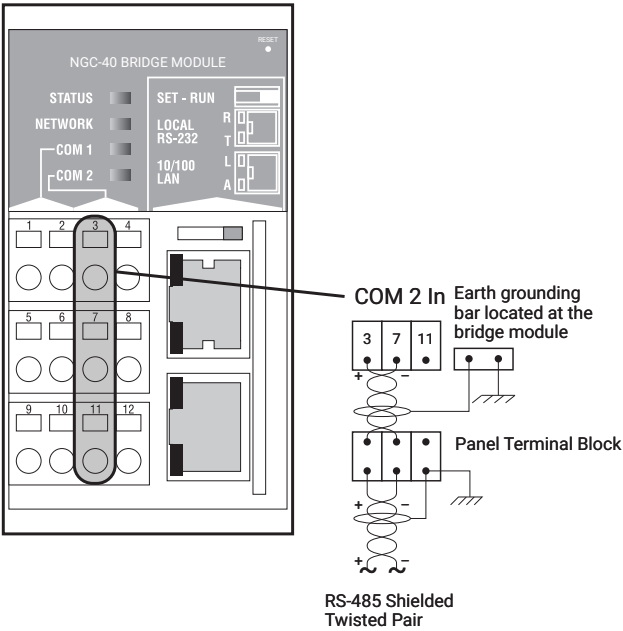

Field

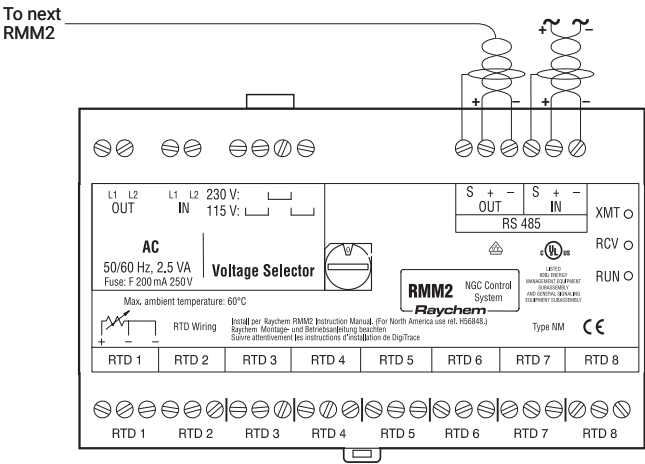


NGC-40 CAN Bus Connections for Up to 10 Modules

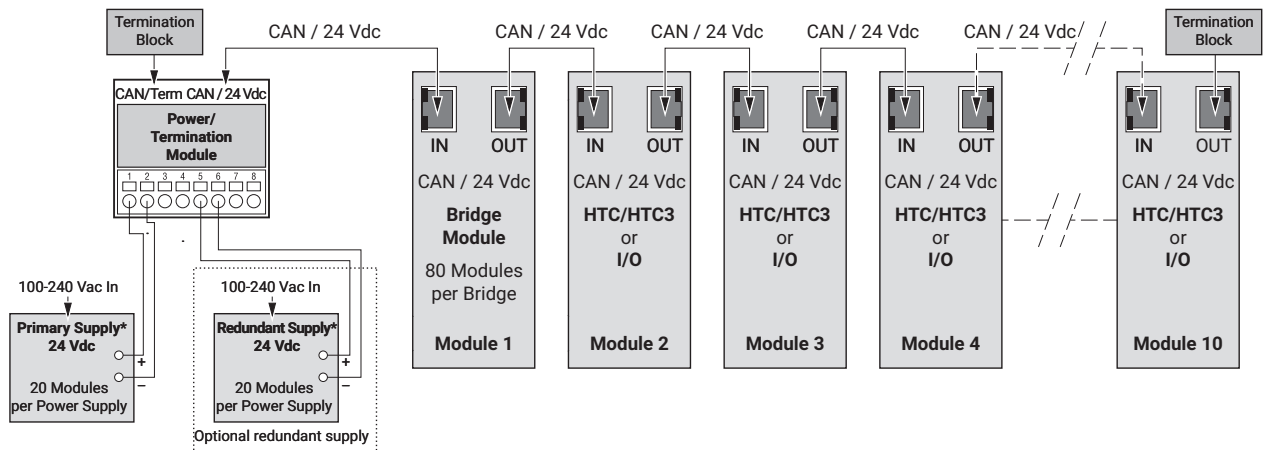

* Power supply shall have a means for disconnect from line voltage

NGC-40 CAN Bus Connections for Up to 20 Modules

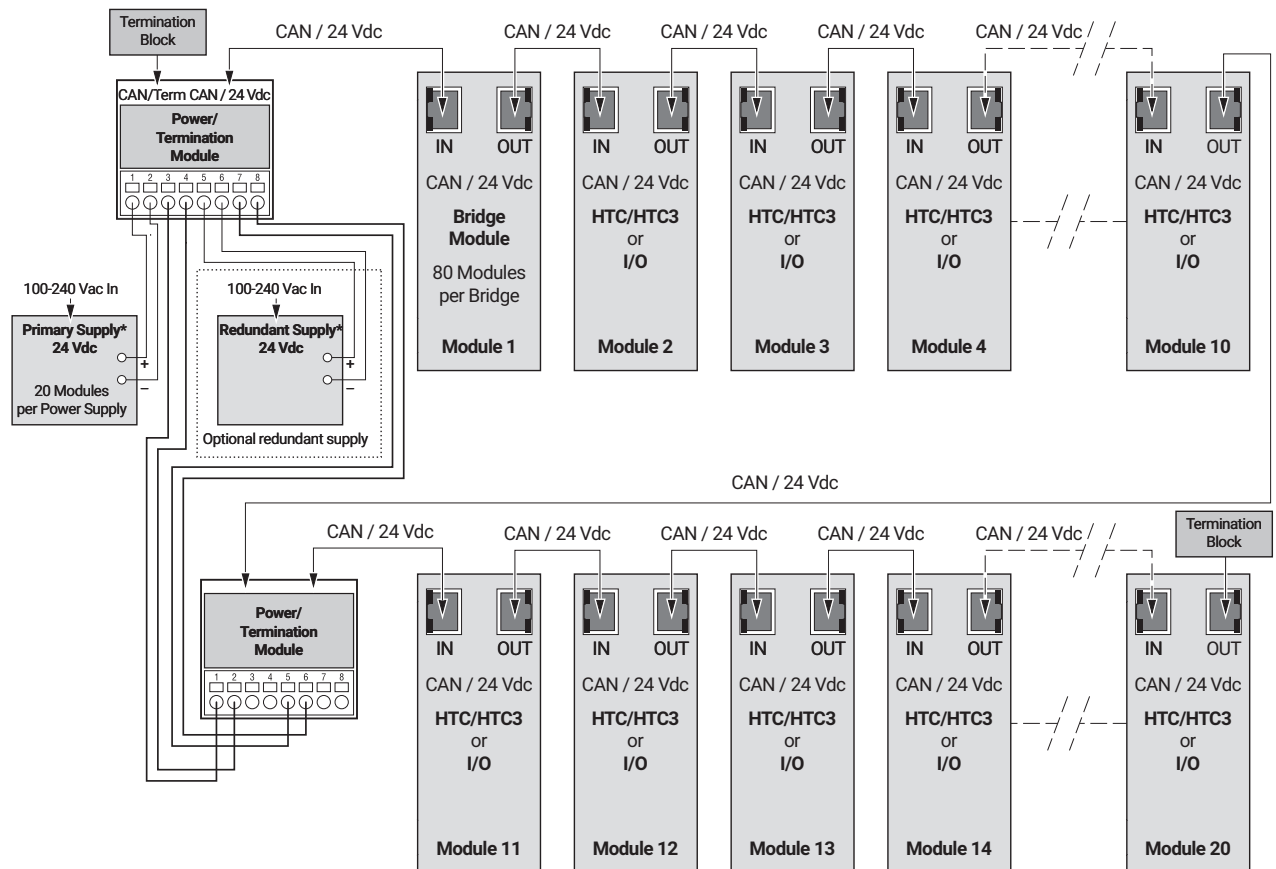

* Power supply shall have a means for disconnect from line voltage

A termination block (included) is required at each end of the CAN/24 Vdc bus. See NGC-40 CAN bus connection wiring diagram for more details.




The NGC-40-BRIDGE must be mounted in an enclosure to protect its electronic components. For indoor applications, use a minimum NEMA 1 enclosure (NEMA 12 recommended). For outdoor applications, use a NEMA 4 or NEMA 4X enclosure depending on the requirements.

The NGC-40-BRIDGE should be located in the rear of the panel. The NGC-40-BRIDGE assembly is an electronic unit and must not be located where it will be exposed to strong magnetic fields or excessive vibration.

The diagram shows a fire alarm control panel with a door on the left and an alarm light on the right. The door is labeled "Panel door" and the alarm light is labeled "Alarm light". The panel itself is labeled "Panel" and contains a series of indicator lights and a "TEST" button. The indicator lights are arranged in two columns, with labels such as "F1", "F2", "F3", "F4", "F5", "F6", "F7", "F8", "F9", "F10", "F11", "F12", "F13", "F14", "F15", "F16", "F17", "F18", "F19", "F20", "F21", "F22", "F23", "F24", "F25", "F26", "F27", "F28", "F29", "F30", "F31", "F32", "F33", "F34", "F35", "F36", "F37", "F38", "F39", "F40", "F41", "F42", "F43", "F44", "F45", "F46", "F47", "F48", "F49", "F50", "F51", "F52", "F53", "F54", "F55", "F56", "F57", "F58", "F59", "F60", "F61", "F62", "F63", "F64", "F65", "F66", "F67", "F68", "F69", "F70", "F71", "F72", "F73", "F74", "F75", "F76", "F77", "F78", "F79", "F80", "F81", "F82", "F83", "F84", "F85", "F86", "F87", "F88", "F89", "F90", "F91", "F92", "F93", "F94", "F95", "F96", "F97", "F98", "F99", "F100".

NGC-40 CAN Bus Connections for Up to 40 Modules

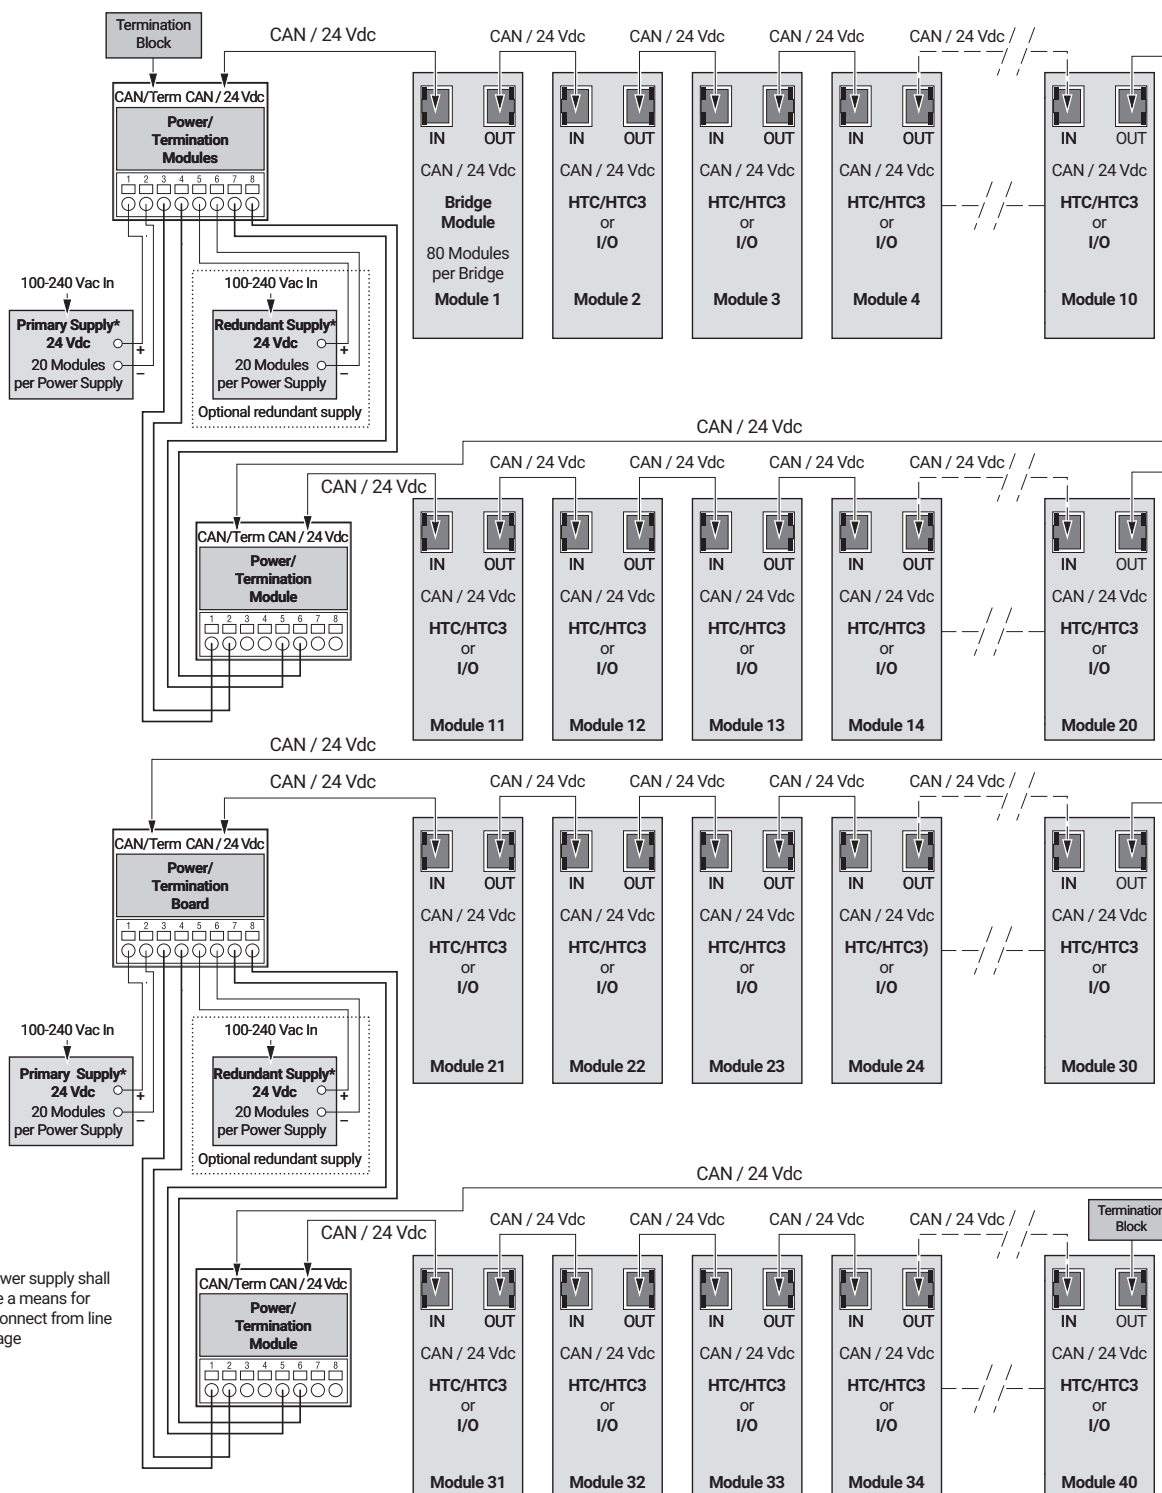

* Power supply shall have a means for disconnect from line voltage

North America

Tel +1 800 545 6258
info@chemelex.com

Latin America

Tel +1 713 868 4800
info@chemelex.com

Europe, Middle East, Africa, India

Tel +32 16 213 511
Fax +32 16 213 604
info@chemelex.com

Asia Pacific

Tel +86 21 2412 1688
infoAPAC@chemelex.com

chemelex
excellence is everything

Raychem

Tracer

Pyrotenax

Nuheat