



Raychem

Whes Heat Shrink End Seal Kit

Installation Instructions

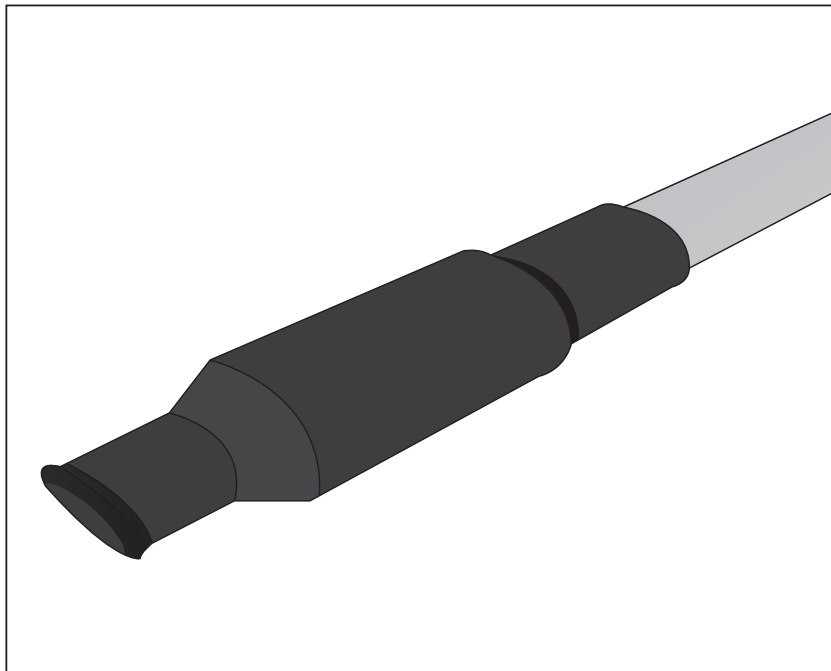

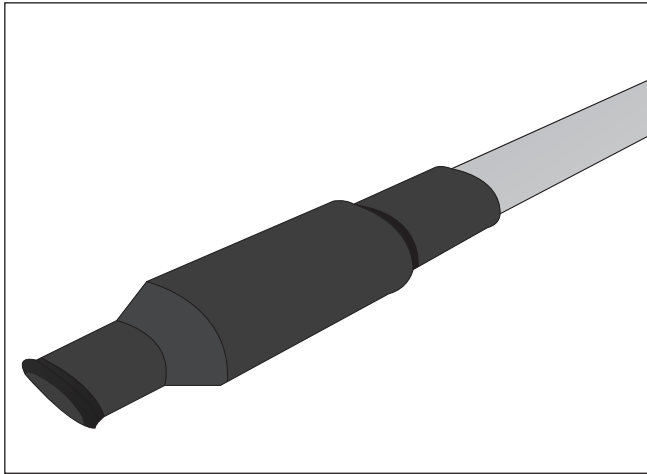

DESCRIPTION

For use with the following self-regulating heating cables:
Raychem GM-1X, GM-2X, WFP-612, WFP-622, WFP-812, WFP-822,
WFP-312 and WFP-322.

TOOLS REQUIRED

- Utility knife
- Diagonal cutters
- Needle-nose pliers
- Heat gun or propane torch with flame spreader


APPROVAL



8772 Deicing & Snowmelting Equipment
-WS for Canada

KIT CONTENTS

Item	QTY	Description
A	1	Warning labels
B	1	Black heat-shrinkable tube (½" x 1½")
C	1	Black heat-shrinkable tube (¾" x 3")

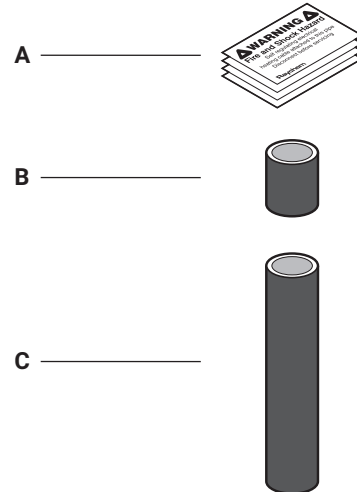

⚠ WARNING:

These components are electrical devices. They must be installed correctly to ensure proper operation and to prevent shock or fire. Carefully follow all of the installation instructions and read these important warnings.

- To minimize the danger of fire from sustained electrical arcing if the heating cable is damaged or improperly installed, and to comply with the requirements of Chemelex and the National Electrical Codes, ground-fault equipment protection must be used on each heating cable branch circuit. Arcing may not be stopped by conventional circuit breakers.
- Component approvals and performance are based on the use of specified parts only. Do not use substitute parts or vinyl electrical tape.
- The black heating-cable core is conductive and can short. It must be properly insulated and kept dry.
- Keep components and heating cable ends dry before and during installation.
- Damaged bus wires can overheat or short. Do not break bus wire strands when scoring the jacket or core.
- Bus wires will short if they contact each other. Keep bus wires separated.
- Heat-damaged components can short. Use a heat gun or a torch with a soft, yellow flame. Keep the flame moving to avoid overheating, blistering, or charring the heat-shrinkable tubes. Avoid heating other components. Replace any damaged parts.
- Use only fire-resistant insulation materials such as fiberglass wrap.
- Leave these installation instructions with the user for future reference.








⚠ CAUTION:

Health Hazard: Charring or burning the heat-shrinkable tubes in this kit will produce fumes that may cause eye, skin, nose, and throat irritation. Consult Material Safety Data Sheet RAY/3122 for further information.

CHEMTREC 24-hour emergency telephone:
(800) 424-9300.

Non-emergency health and safety
information: (800) 545-6258.

END SEAL INSTALLATION

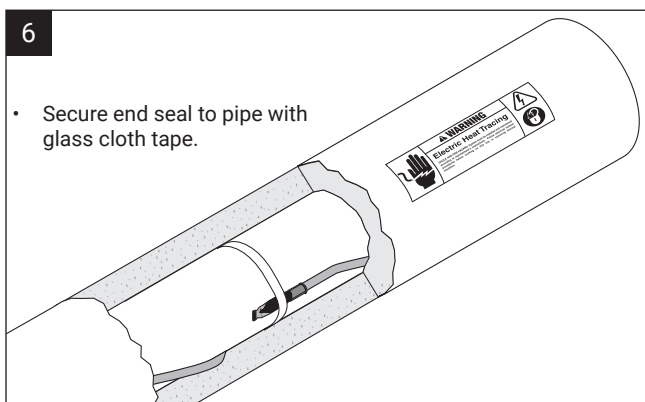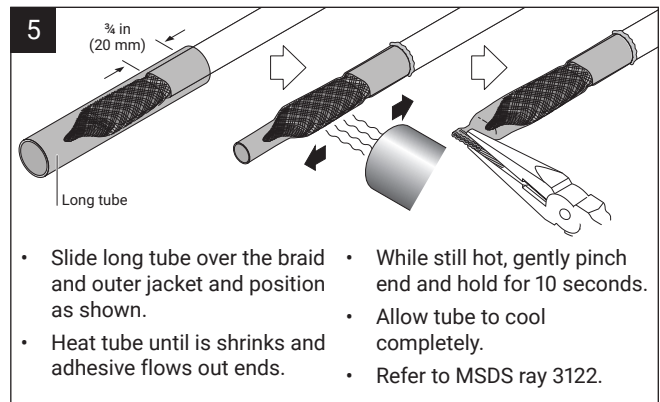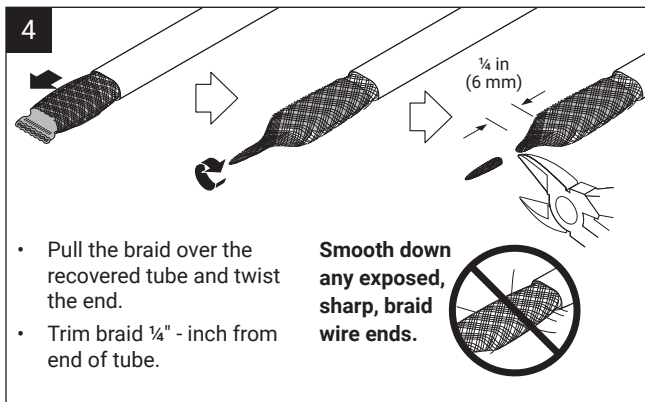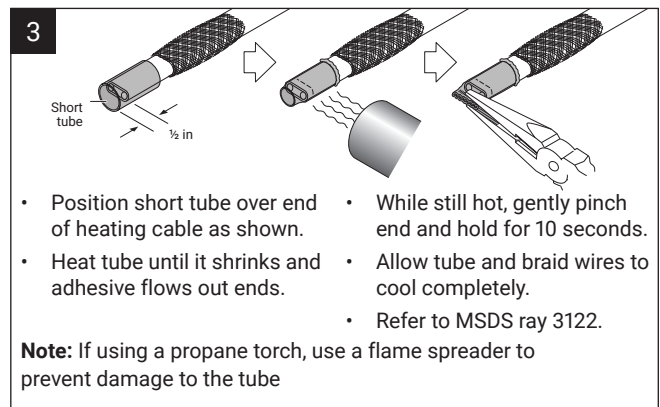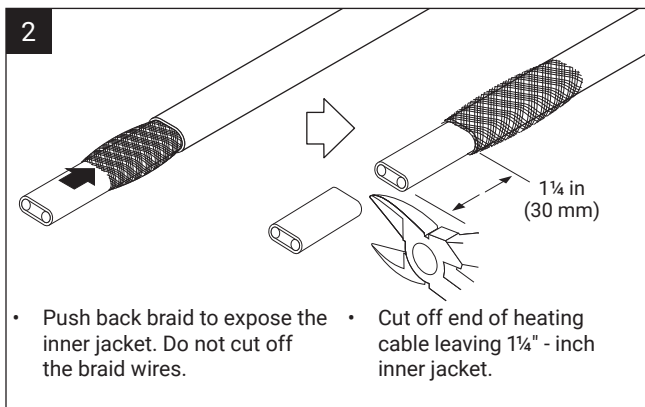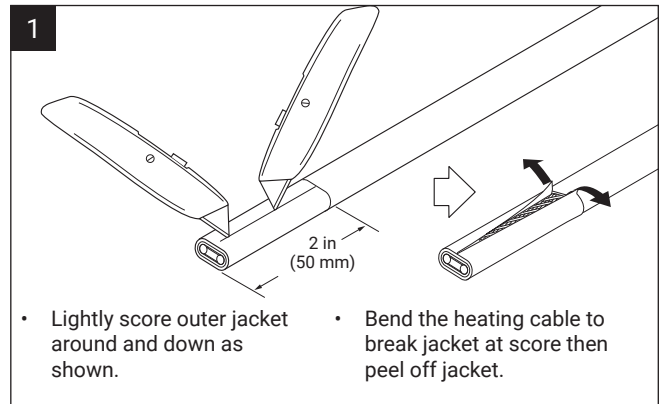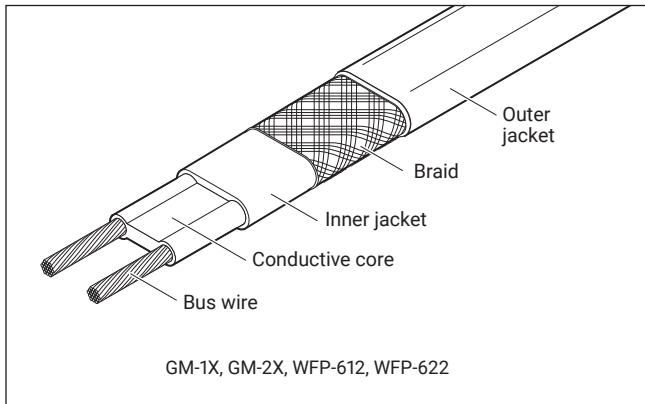

⚠ WARNING:

All information, including illustrations, is believed to be reliable. Users, however, should independently evaluate the suitability of each product for their particular application. Chemelex makes no warranties as to the accuracy or completeness of the information, and disclaims any liability regarding its use. Chemelex' only obligations are those in the Chemelex Standard Terms and Conditions of Sale for this product, and in no case will Chemelex or its distributors be liable for any incidental, indirect, or consequential damages arising from the sale, resale, use, or misuse of the product. Specifications are subject to change without notice. In addition, Chemelex reserves the right to make changes - without notification to Buyer - to processing or materials that do not affect compliance with any applicable specification.

North America

Tel +1 800 545 6258
info@chemelex.com

Latin America

Tel +1 713 868 4800
info@chemelex.com

Europe, Middle East, Africa, India

Tel +32 16 213 511
Fax +32 16 213 604
info@chemelex.com

Asia Pacific

Tel +86 21 2412 1688
infoAPAC@chemelex.com

chemelex
excellence is everything

Raychem

Tracer

Pyrotenax

Nuheat